




# EMC-Shielding-Net

for RF electromagnetic radiation

Item No. 97494

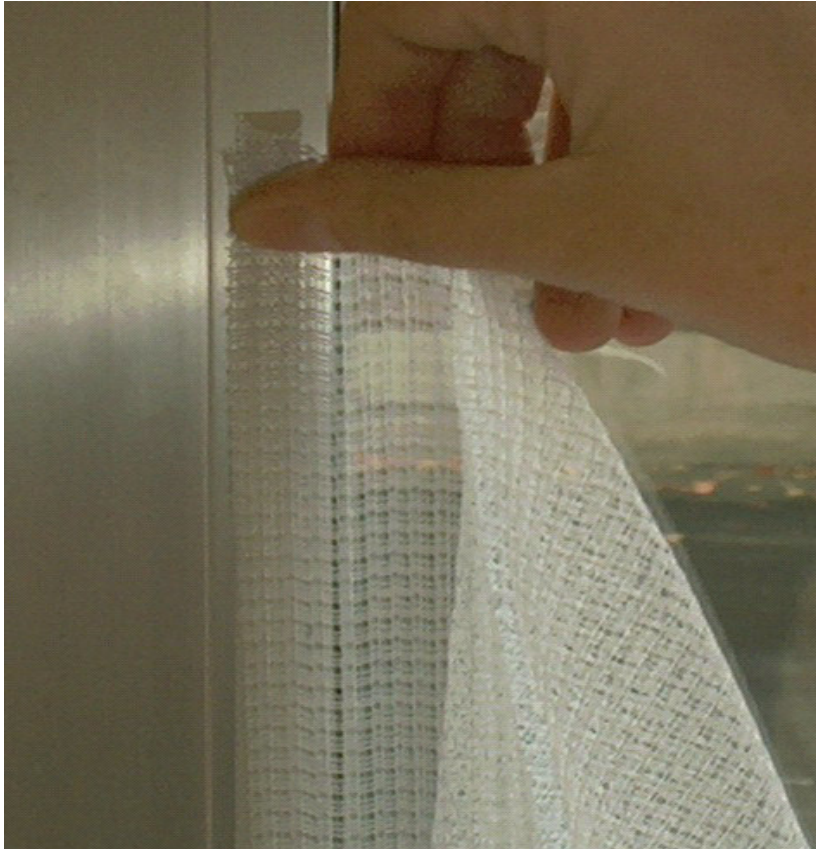

**A simple and save possibility for shielding of doors and windows. Easy and simple to install, without tools!**

**Contents:** Shielding Net 1,0m x 1,5m; selfadhesive tape 5m; instructions




## installation guideline:



Remove the protective cover from the selfadhesive tape.



Stick the selfadhesive tape on the frame around the window or door.

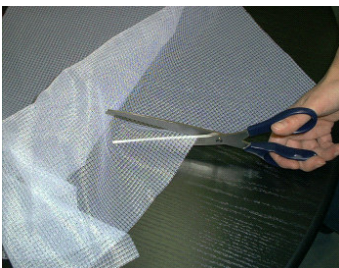

Cut the shielding-net to the right size.



Press the shielding-net to the selfadhesive tape