


Verarbeitung EMV-Kupfer-System

Processing EMC-copper-system



Tragen Sie einen handelsüblichen Dispersionskleber auf die Wand auf.

Apply a regular dispersion adhesive for wallcoverings on the wall.

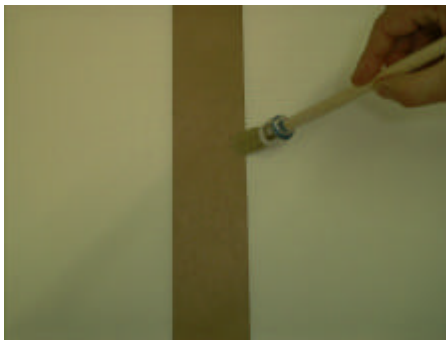

Verkleben Sie unter jeder horizontalen und vertikalen Naht einen Abdeckstreifen, Art. Nr. 97468, mit der Kupferseite nach oben (sichtbar). Tragen Sie Klebstoff auf der Oberseite des Abdeckstreifens auf.

Stick a connecting tape item no 97468 with copperside up under each seam (horizontal + vertical seam). Apply adhesive on the surface of the connecting tape.



Legen Sie das trockene Kupfervlies in das Kleberbett ein und drücken Sie es gut an. Stellen Sie sicher, dass sich ein Abdeckstreifen unter jeder Naht befindet.

Apply the dry fleece to the pasted wall and make sure that it's stuck smoothly to the wall, no air-bubbles shall be left. Make sure that a connecting tape is placed under each seam.

Hinweis: Verwenden Sie einen als Pulverprodukt angebotenen Dispersionskleber, flüssige Kleber enthalten oft Additive die dem Kupfervlies schaden können.
Notice: Use a dispersion adhesive which is based on powder, liquid adhesives often contain additives which may damage the copper-fleece.

